


SHOWER CURTAIN ROD

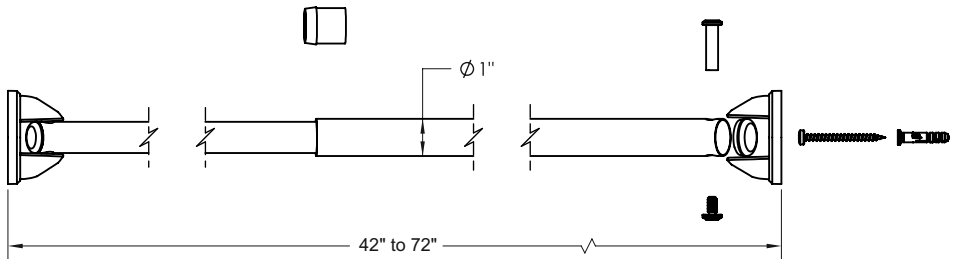

INFORMATION

- To avoid the risk of property damage, do not secure the wall brackets to acrylic shower walls. Instead, secure the wall brackets above the acrylic tub into the finished walls.
- Strongly recommended to provide wood blocking for proper secured installation. In absence, wall anchors must be used.




TOOLS AND MATERIALS INCLUDED

Allen Wrench (Qty 3) | Wall Anchors (Qty 4) | Mounting Screws (Qty 4) | Set Screws (Qty 2) | Mounting brackets (Qty 2) | Curved Rod (Qty 2)

TOOLS NEEDED FOR INSTALLATION (Not Included)

Phillips Head Screwdriver | Drill | Level | Tape Measurer | Hammer

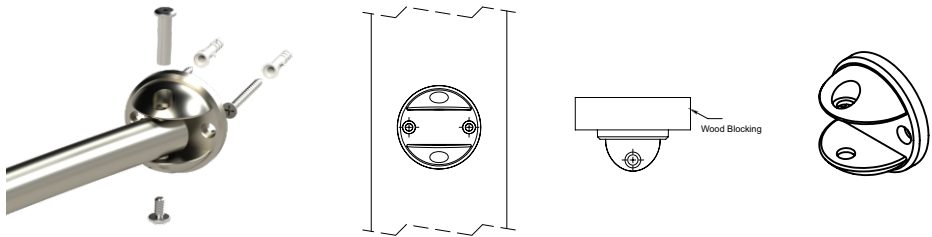

INSTRUCTIONS

1. Place wall bracket onto wall where desired. Make sure it is level, use a pencil to lightly mark desired screw placement. Repeat for other side.
2. Use 1/8" drill bit for wall anchors.
3. Mount wall brackets, screw into wall anchors.
4. Once shower rod is installed, adjust rod so that both set screws will adequately contact the rod. Once confirmed insert and tighten set screws with allen wrench.